
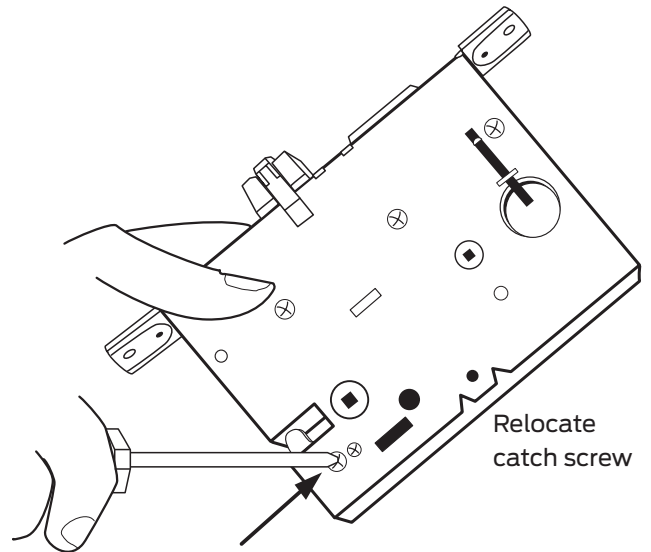


Changing lock hand

No more than two simple steps are required to change the hand of any L Series lock. Rotate the latch unit 180° and/or change the catch screw position.

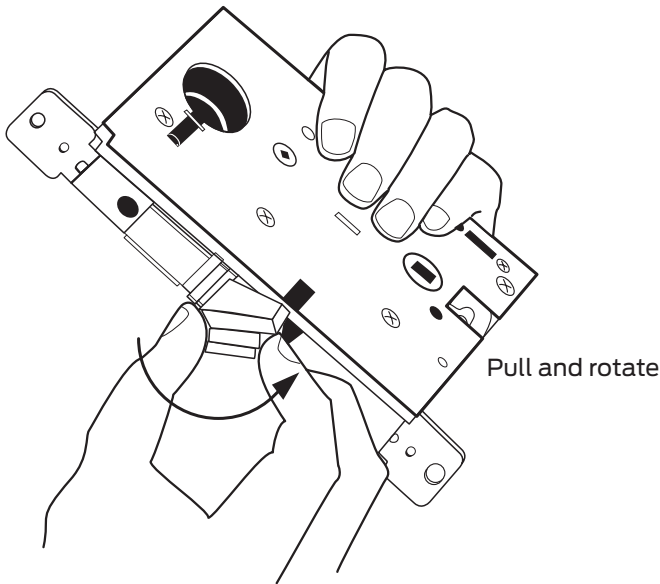


A. Changing latchbolt handing

Remove armored front. Pull latchbolt away from chassis and rotate complete unit 180° to reverse the door handing. Reinstall armored front.

B. Change chassis handing

Remove catch screw from one side of chassis and install on opposite side. For RH and RR, the catch screw will be on the lock case side. For LH and LR, the catch screw will be on the lock case cover.

Note: Catch screw location reversed for Vandlgard function.

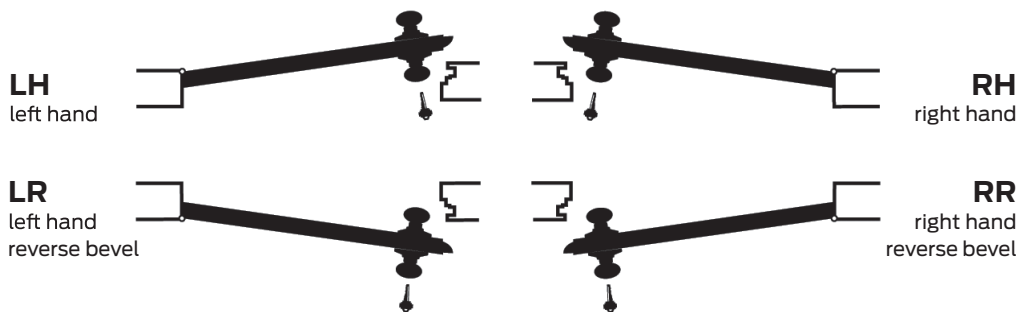

The hand is determined by the direction the door swings when viewed from the exterior or corridor side of the door.