

# TEMPLATE(C)

## DDS-1000 Double Door Strike for 1000 Series




FOR 1000R USE

FOR 1000V USE

Fold on dotted line and fit on door edge

3 9/32"

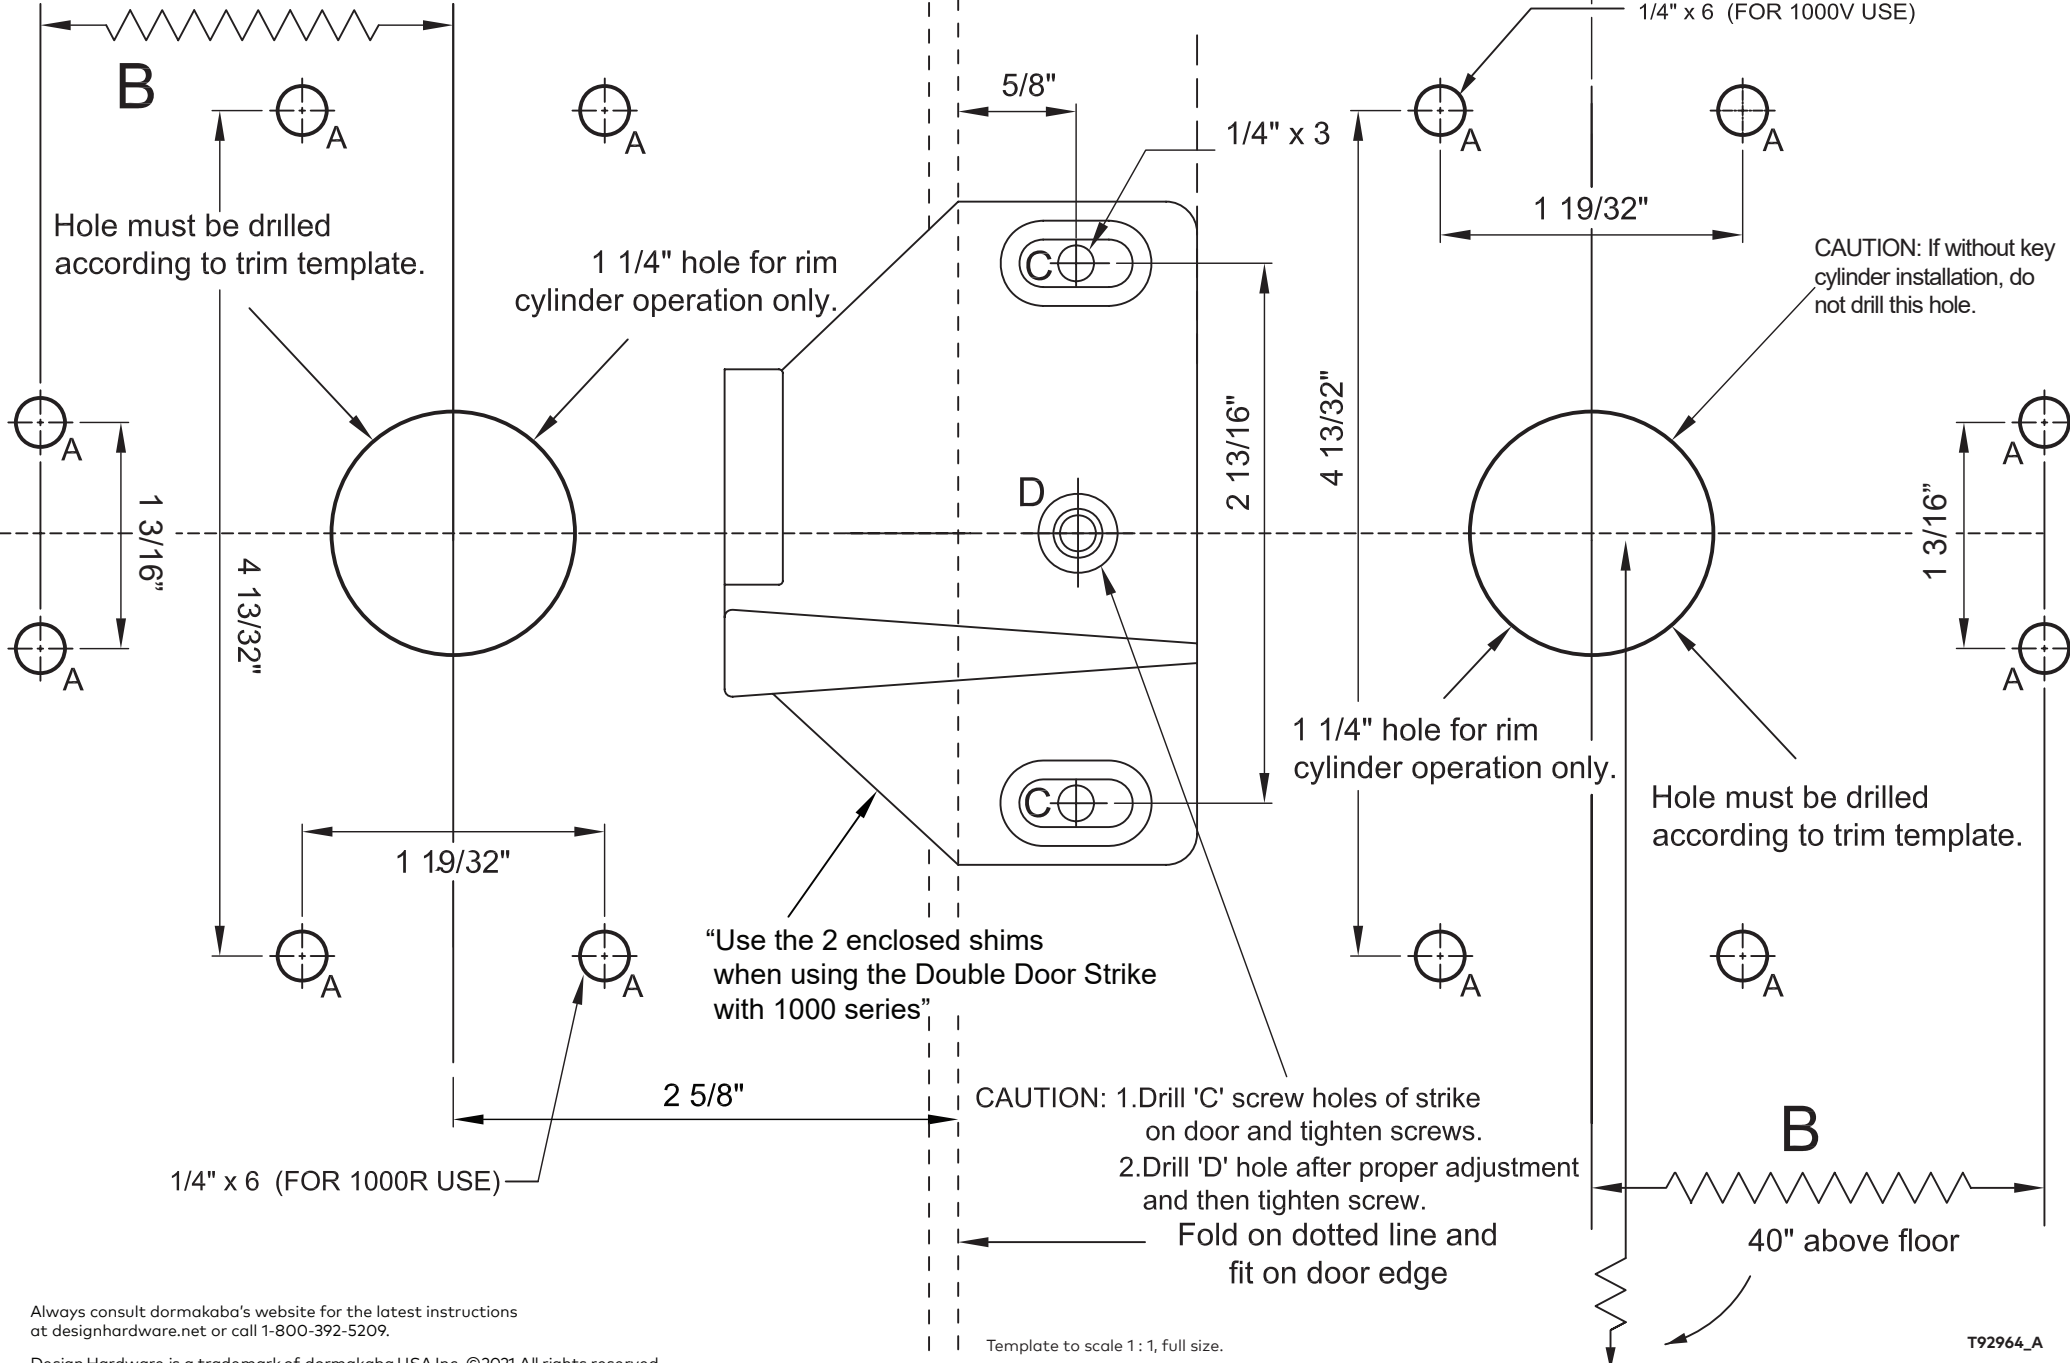

CAUTION: If without key cylinder installation, do not drill this hole.

"Use the 2 enclosed shims when using the Double Door Strike with 1000 series"

CAUTION: 1. Drill 'C' screw holes of strike on door and tighten screws.  
2. Drill 'D' hole after proper adjustment and then tighten screw.

Fold on dotted line and fit on door edge

Always consult dormakaba's website for the latest instructions at designhardware.net or call 1-800-392-5209.

Design Hardware is a trademark of dormakaba USA Inc. ©2021 All rights reserved.

Template to scale 1 : 1, full size.