


Rockwood AP1007

Experience a safer
and more open world

For Installation Assistance, Call Rockwood Products at 800-458-2424 • www.assaabloydooraccessories.us

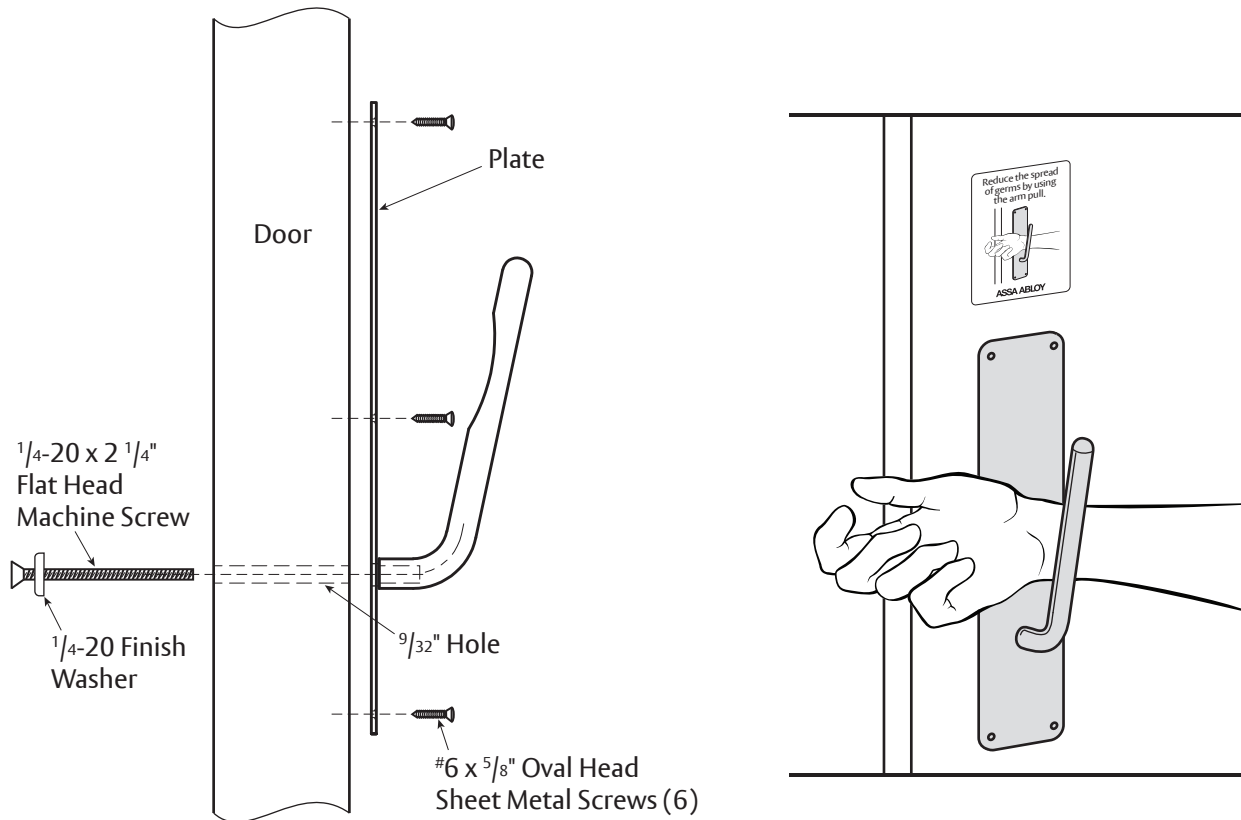

Installation Instructions:

1. Determine your desired location for the pull plate.
2. Mark the door for thru bolt location.
3. Drill a $\frac{9}{32}$ " hole in the door to accept the thru bolt.
4. Put finish washer on thru bolt and install thru bolt into pull, continue to hold the pull plate combo in place as to not let the plate spin.
5. Install 6 Oval Head Sheet Metal Screws.
6. If desired, apply how to use sticker to door.

Note: Installation of thru bolt is critical.