

Architectural Door Accessories

ASSA ABLOY

Pemko Commercial Threshold


The global leader in
door opening solutions

Applies to the following product:


2008_PK

Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position threshold so that seal contacts face of door along entire width when door is closed (see above illustration).
3. Peel and stick PK381 gasket from jamb to jamb on threshold and door stops.
4. Drill pilot holes in floor through pre-drilled holes in threshold.
5. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
6. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

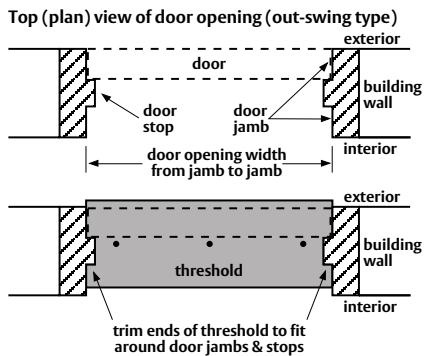

Tools Required:



Testing/Ratings:



BHMA
CERTIFIED

www.pemko.com

MEMPHIS, TN USA VENTURA, CA USA VANCOUVER, BC CA TORONTO, ON CA
P: 800 824-3018 P: 800 283-9988 P: 877 535-7888 P: 877 535-7888
F: 800 243-3656 F: 800 283-4050 F: 877 535-7444 F: 877 535-7444

Copyright © 2017 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

2008_PK_WEBINS
Rev 2 - 01.25.17
Page 1 of 1