

# Architectural Door Accessories

**ASSA ABLOY**

## Pemko Commercial Threshold

The global leader in  
door opening solutions


Applies to the following products:

**173, 169, 1700, 166, 273X3\_FG, 273X4\_FG,  
274X4\_FG, 2746X6\_FG, 255X5\_FG, 256X6\_FG,  
252X2\_FG, 252X3\_FG, 252x5\_FG, 253X3\_FG,  
253X4\_FG, 254X4\_FG, 254X5\_FG**


### Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position threshold so that vinyl seal contacts face of door along entire width when door is closed (see below illustration).
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

Top (plan) view of door opening (out-swing type)

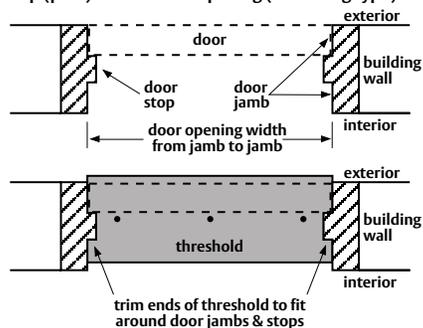

### Tools Required:



### Testing/Ratings:



**BHMA**  
CERTIFIED

[www.pemko.com](http://www.pemko.com)

MEMPHIS, TN USA    VENTURA, CA USA    VANCOUVER, BC CA    TORONTO, ON CA  
P: 800 824-3018    P: 800 283-9988    P: 877 535-7888    P: 877 535-7888  
F: 800 243-3656    F: 800 283-4050    F: 877 535-7444    F: 877 535-7444

Copyright © 2017 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.  
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

CT3\_WEBINS  
Rev 3 - 01.25.17  
Page 1 of 1