# Architectural Door Accessories



Experience a safer and more open world


## Pemko Door Top Solutions

Applies to the following product:

#### EGA305XGSS

#### Installation Instructions

- Measure, mark, and trim door top angle on each side of door.
  NOTE: Hole pattern is slightly off-center to ensure screws are placed properly.
- Drill pilot holes in door at marks for each piece (both sides of the door).
  NOTE: For wood doors, fasteners should be drilled into the door's top rail.
- 3. Install HSS2000 onto small leg of angle (as shown).
- 4. Mount each piece to door with supplied fasteners.

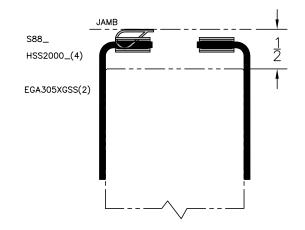

### **Testing/Ratings:**

Excessive clearance solutions for door and frame clearances when installed per the manufacturer's instructions, intended for use with UL Classified steel composite, hollow metal doors, wood and plastic-covered composite core doors with UL Listed fire door frames up to 1-1/2 hour.





**Tools Required:** 

